

## Parts list E 10

## Code

Outside basket	1801
Inside basket	P1802
Complete cover	1803
Cover w/ o small cover, handle & gear	1804
Handle only	1809
Axle for outside basket	1810
Small cover with handle & gear	1812
Axle	1814
Small cover (w/ o handle & drive gear)	2805
Perforated drive gear + pin	2806
Large gear	2807
Small gear	2808
Pin	2811
Axle for drive & small gear	2813
Set of gears (2806, 2807, 2808, 2811)	2815.1
Handle screws (4)	9014
Orange plastic nuts (4)	9014.P
Stainless steel pins (M4x25) (4)	9014.G

## Parts list E 20

## Code

Outside basket	2801
Inside basket	P2802
Complete cover	2803
Cover w/ o small cover, handle & gear	2804
Small cover (w/ o handle & drive gear)	2805
Perforated drive gear + pin	2806
Large gear	2807
Small gear	2808
Handle only	2809
Axle for outside basket	2810
Pin	2811
Small cover with handle & gear	2812
Axle for drive & small gear	2813
Axle	2814
Set of gears (2806, 2807, 2808, 2811)	2815.1
Handle screws (4)	9014
Orange plastic nuts (4)	9014.P
Stainless steel pins (M4x25) (4)	9014.G

